


A **FACTORY SANDWICH SEAM**

APPLICATION NOTES: SANDWICH FACTORY SEAM

- 1) LINE UP TOP LAYER OF PRE-TAK UP TO BOTTOM SHEET FACTORY SEAM LINE
- 2) REMOVE RELEASE LINER COVERING ADHESIVE EDGE ON BOTTOM SHEET
- 3) ROLL STEEL ROLLER OVER TOP SHEET SEAM SEVERAL TIMES WHILE APPLYING SIGNIFICANT PRESSURE
- 4) VERIFY SEAM IS COMPLETELY BONDED
- 5) REPAIR ANY FISHMOUTHS OR POOR SEAM BONDS WITH PRE-TAK TAPE.

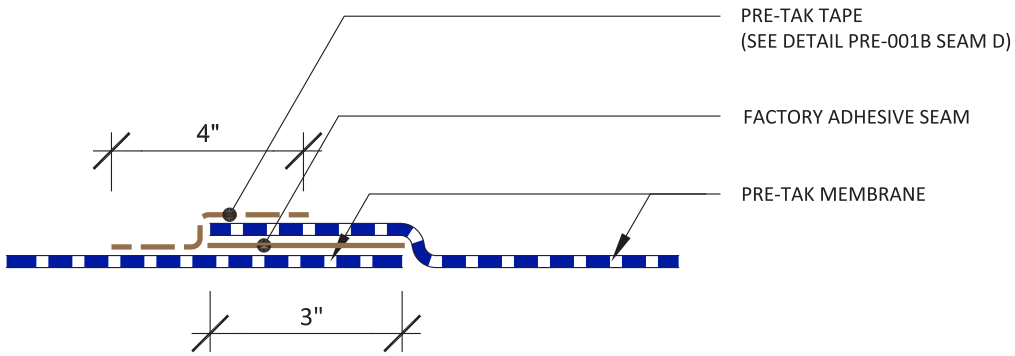

B **REINFORCED SEAM**

*REINFORCED SEAM REQUIRED FOR SHOTCRETE APPLICATIONS AND HYDROSTATIC WATERTABLE CONDITIONS.

KINGFIELD CONSTRUCTION PRODUCTS 20 N 4th St, Suite 300 Minneapolis, MN 55401 e: info@kingfieldcp.com o/f: 612.225.5167	PRE-TAK SEAM DETAILS FACTORY LAP SEAMS	DETAIL # PRE-001A
		SYSTEM: PRE-TAK
		ISSUED: 12/15/2017
		SCALE: No To Scale